



5085 Corporate Exchange Blvd. S.E.
Grand Rapids, MI 49512 • 616.656.2900

FSSC-SD

FREESTANDING STAINLESS STEEL SUPPLY CABINET - SINGLE DOOR

Introduction

The optimal clinical workspace begins with only the best storage and organizational tools. SKYTRON brings ease and simplicity to your healthcare facility. Constructed in the United States with unparalleled quality for minimal required maintenance, our cabinets lead the market in cost effectiveness and durability. SKYTRON makes the design of your clinical work environment simple; we will partner our expertise with your objectives to create a customized storage solution designed with your needs in mind.

Standard Features

Cabinet is enclosed by a double-pan glazed door hung on full length stainless steel hinges. A one-piece outer and inner door frames holds 1/4" tempered safety glass. Door is equipped with a copper clad pull handle and top and bottom spring loaded nylon roller catches. Cabinet is furnished with one fixed bottom shelf and three solid stainless steel shelves adjustable on 1/2" increments for storage of equipment and supplies.

Options

Width:	24"
Depths:	18" and 24"
Heights:	81", 84" and 92"
Door Locks:	Available for all hinged door cabinets
Shelves:	Additional stainless steel shelves and support brackets
CathRac:	Catheter management hook systems to hang inventory for quick visual access
Scope Hanger:	Endoscope hanger EH-6




Architectural Specifications

Construction:	Heavy gauge stainless steel, type 304, heli-arc welding & spot welded modular assembly
Finish:	#4 Finish, welds ground & polished smooth
Hardware:	Full length door hinges, nylon roller door catches, and copper clad wire pulls
Glass:	1/4" tempered double strength safety glass
Shelves:	Stainless steel, three height adjustable, one stationary
Interior:	Smooth, obstruction free for easy cleaning
Installation:	Pre-punched and positioned anchorage holes with built in blocking and recess wall flanges

Technical Drawing

NOTES:

- All single door models are right hand hinged.
- For detailed fastening information, please reference the SKYTRON installation manual.
- For Seismic Zone application, please refer to the Seismic Approval documents.
- All dimensions are $\pm\frac{1}{8}$ " (3mm).

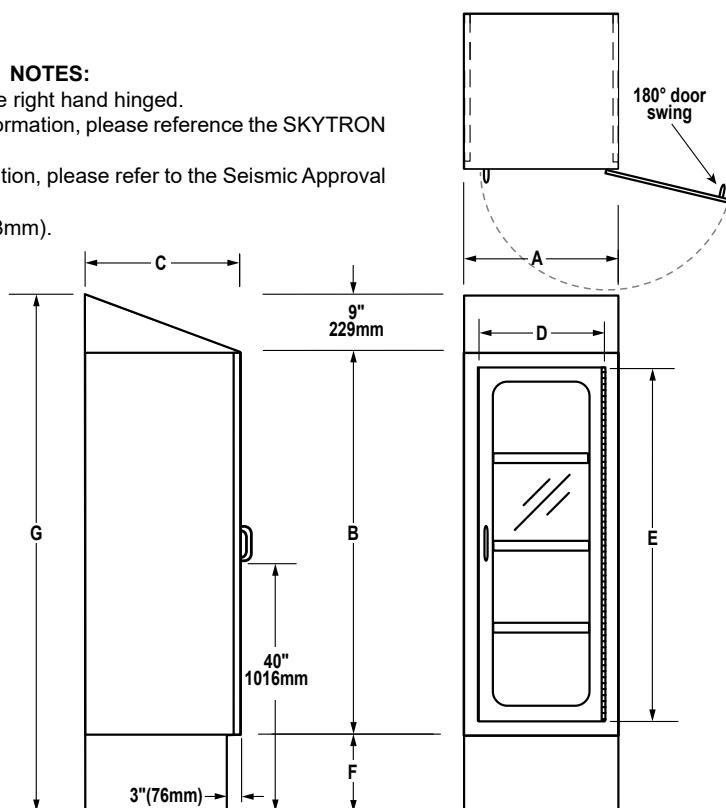

Technical Data

Model:	FSSC248118	FSSC248124	FSSC248418	FSSC248424	FSSC249218	FSSC249224
Exterior Dimensions						
Width (A):	24" (610mm)	24" (610mm)	24" (610mm)	24" (610mm)	24" (610mm)	24" (610mm)
Height (B):	60" (1524mm)	60" (1524mm)	72" (1828mm)	72" (1828mm)	80" (2032mm)	80" (2032mm)
Depth (C):	18" (457mm)	24" (610mm)	18" (457mm)	24" (610mm)	18" (457mm)	24" (610mm)
Interior Dimensions						
Width (D):	21" (533mm)	21" (533mm)	21" (533mm)	21" (533mm)	21" (533mm)	21" (533mm)
Height (E):	57" (1448mm)	57" (1448mm)	69" (1752mm)	69" (1752mm)	77" (1956mm)	77" (1956mm)
Depth:	17" (432mm)	23" (584mm)	17" (432mm)	23" (584mm)	17" (432mm)	23" (584mm)
Misc. Dimensions						
Base Height (F):	12" (305mm)	12" (305mm)	3" (76mm)	3" (76mm)	3" (76mm)	3" (76mm)
Overall Height (G):	81" (2057mm)	81" (2057mm)	84" (2134mm)	84" (2134mm)	92" (2336mm)	92" (2336mm)
Weight						
Empty:	216 lbs (98 kg)	231 lbs (105 kg)	239 lbs (108 kg)	256 lbs (116 kg)	261 lbs (118 kg)	278 lbs (126 kg)
Loaded:	416 lbs (189 kg)	431 lbs (195 kg)	489 lbs (222 kg)	505 lbs (229 kg)	561 lbs (254 kg)	578 lbs (262 kg)
Crated:	284 lbs (129 kg)	299 lbs (136 kg)	307 lbs (139 kg)	323 lbs (147 kg)	329 lbs (149 kg)	346 lbs (157 kg)

Revision History

Date	Rev	Revision History
11/04/2014	0	Initial Release
07/28/2016	1	Updated cover picture and added reference to copper clad pulls

The base language for this document is ENGLISH. Any translations must be made from the base language.